DURO BAG MFG. CO. 1 Duro Way Walton, KY 41094	DESIGN GROUP: Shopper Series	This .020" Mircrodot Is For Flexographic Printing Only. It Should Be Placed On Every Color At The Center Of Largest Copy (Top To Bottom). The Left Microdot Gets Placed 1/64" Inside The Paste Area. The Right Microdot Gets Placed 1/64" Outside The Right Side Back Fold Edge Line.	BORDER DESIGNS Because Of Machine Movement In Bag Conversion, Copy Should Be Placed At Least 1\4" From Fold Lines Or Edges. In The Top Area, Use 1\2" Bleed. Border Designs Should Be Kept 1/2" From Fold Edges, Top Cutoff And Bottom Fold.	PLEASE NOTE: All Screen, Half-Tones And Process Jobs Must Be Reviewed Bt Duro's Graphic Printing Division Before Preparing Art.	Fill All 5 Anti-Bounce Area With 40% Screen In All Colors Containing Screens
CREATED BY: B. Wallrawe	Macrame Gem 5 1/4 x 3 1/4 x 8 3/8			**This Proof is For Copy, Elements And Position Only. NOT FOR COLOR APPROVAL.**	Full Panel Print Must Bleed Into Top & Bottom Panel Of Bag, Which Is Indicated On Template
TECHNICAL:					
Starting Web: 18.25" Finished Web 18.00"	DATE: 6/2/04 SCALE: FULL				

Anti-Bounce Strips
Fold And Paste Lines
Clone Areas
Bleed Lines
Center Lines

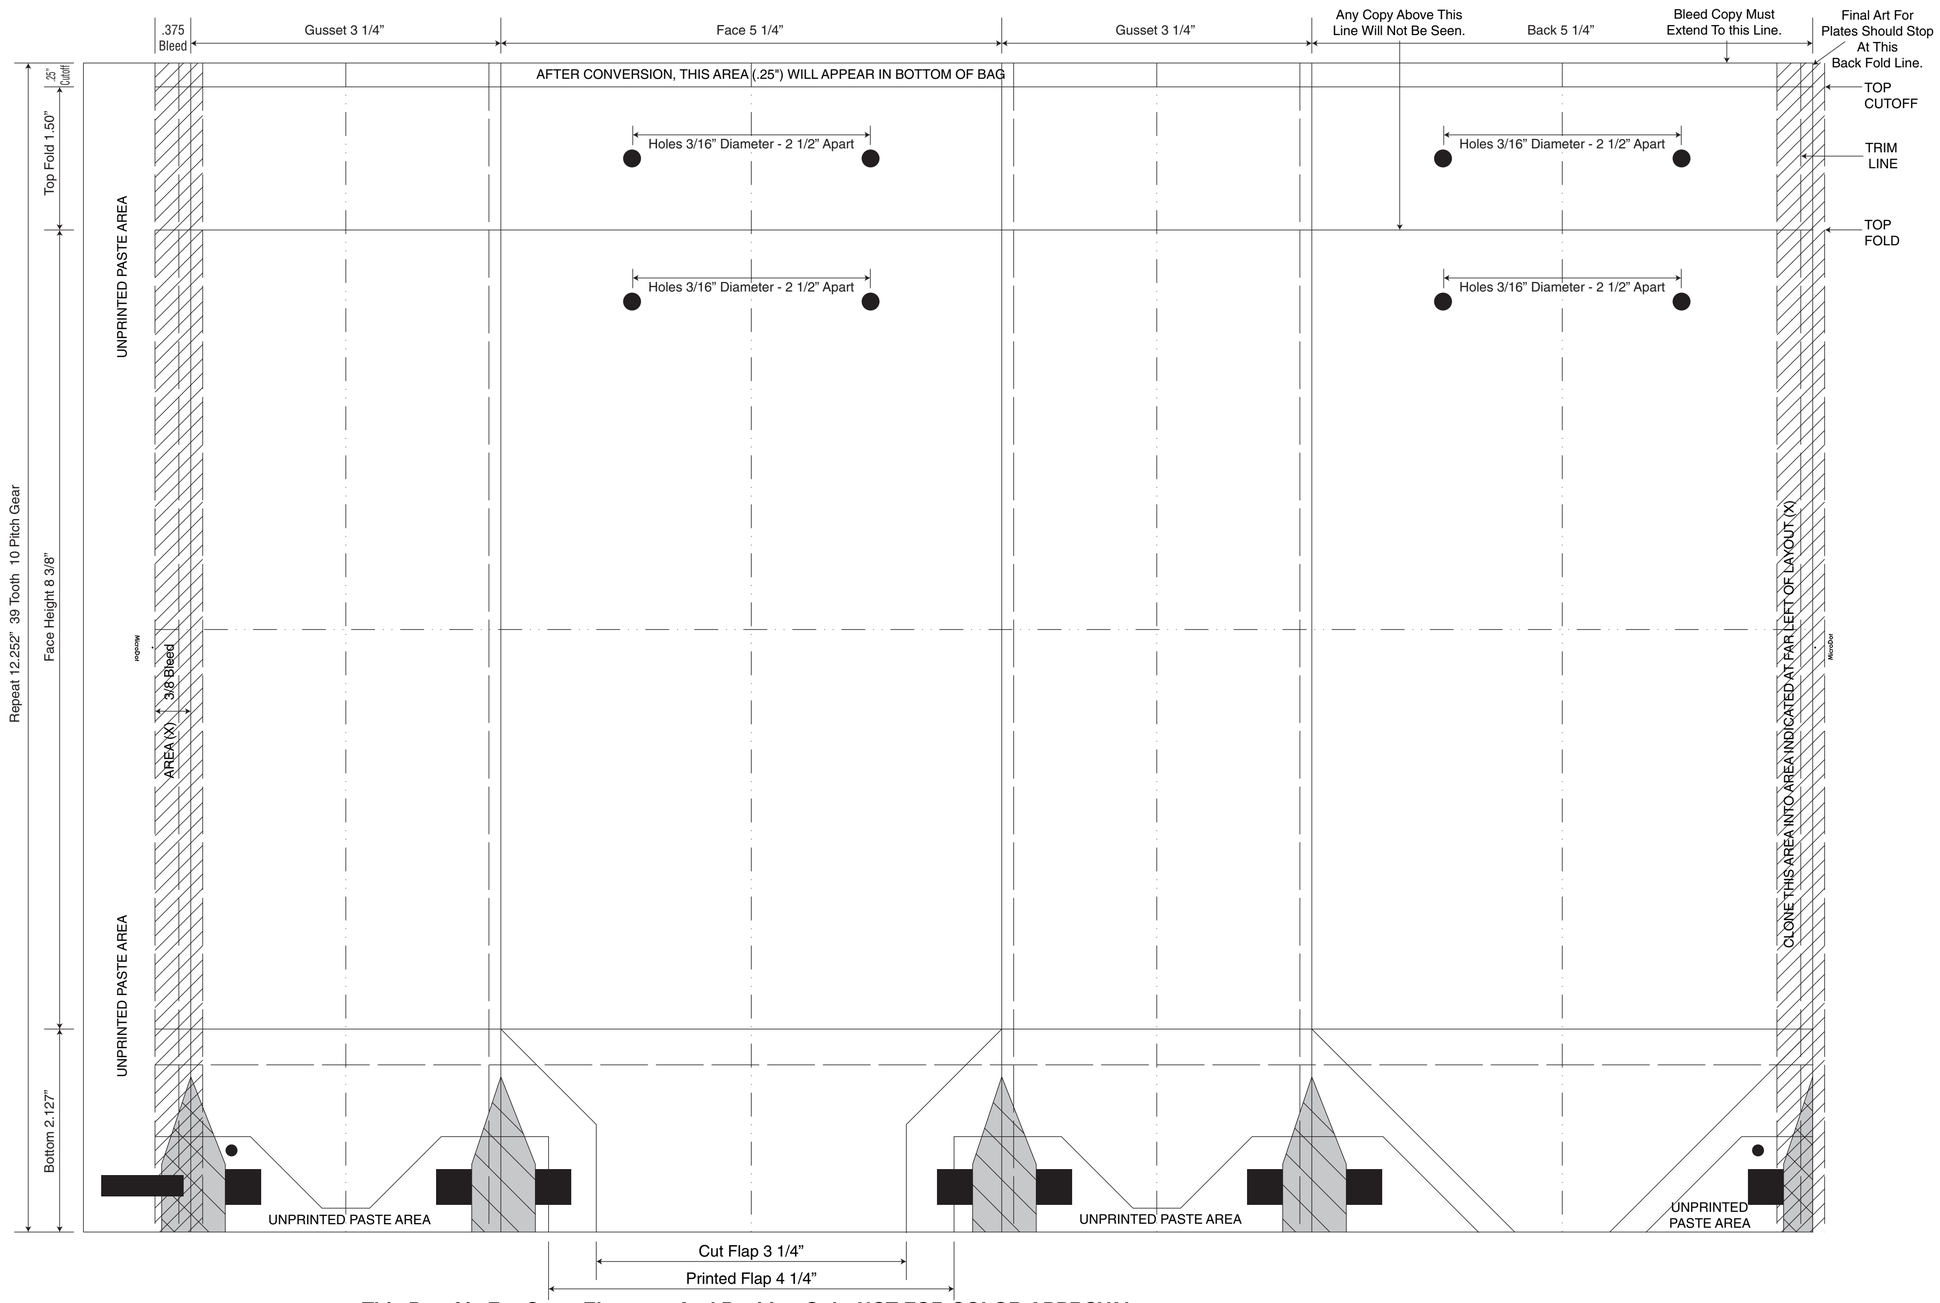

This Proof is For Copy, Elements And Position Only. NOT FOR COLOR APPROVAL.